

## TO REPROGRAM DEFROST SETTINGS

1. Depress and hold SET and PROGRAM buttons on front of controller until 0 is displayed.
2. Using UP and DOWN buttons alter until the number 22 is displayed. Push the SET button. You are now in the main program.

## TO CHANGE INTERVAL BETWEEN DEFROSTS

1. Scroll UP and DOWN buttons until you find set point d1.
2. Press SET button again. The set point is 2 – ie 2 hours duration factory set! You can alter this up or down at this stage using UP and DOWN buttons on controller\*.

## TO CHANGE DEFROST DURATION

1. Scroll UP and DOWN buttons until you find set point dP1.
2. Press SET button again. The set point is 20 – ie 20 minutes duration factory set! You can alter this up or down at this stage using UP and DOWN buttons on controller\*.
3. When complete, enter same settings into dP2 which is the next setting after dP1 – ie both set points must be the same.

## TO CONFIRM ALTERATIONS

1. When all setting is complete, press and hold PROGRAM button until display returns to normal operational display.

\* By altering defrost set points up or down you are increasing or decreasing defrost duration. This can affect the designed operation of the cabinet and mask a fault caused by mis-use or environmental issues, eg the drain may be blocked causing an ice up, doors left open, blocked condenser etc.

Contact an authorised service person to confirm any pre-existing fault first and do not operate the cabinet out of its design specifications.