



BTHT6 Part list

Part No	Name	Qty
S16-043	BLOWER	2
S16-388	TERMINAL BLOCK	3
S16-471	POWER SUPPLY BOTTOM	1
S16-472	LAMP BOTTOM	1
S16-470	THERMOSTAT	1
S16-466	LAMP	2
S16-012	LAMP	1
S16-466	STARTER	3
S16-467	LAMP HOLDER	3
S16-480	LAMP CLIP	3
S16-488	BALLAST	3
S21-074	GLASS PANEL, REAR	1
S21-077	GLASS PANEL, FRONT	2
S21-080	GLASS PANEL, FRONT	1
S25-052	WIRE SHELF	8
S16-514	HEATER	1
A21017	TICKET STRIPS	4
S99-183	DOOR HINGE	2
S19-004	MAGNETIC	1
S19-148	CASTOR C/W BREAK	2
S19-149	CASTOR	2
A50019	SIDE PLATE	2
A53020	FRONT SHUTTER	1