


# F90-740

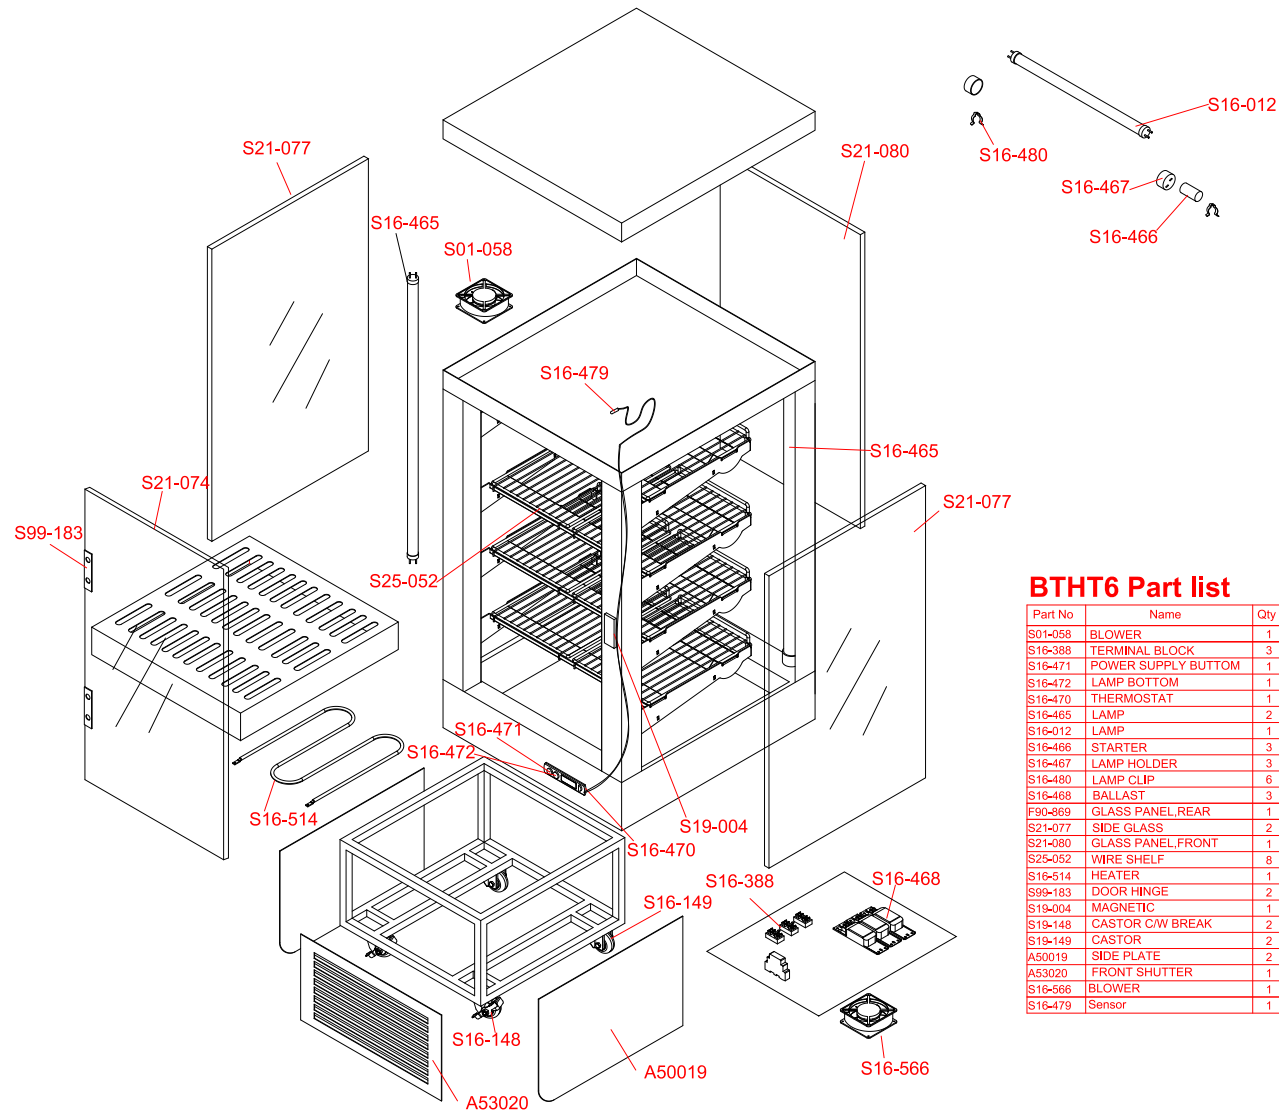

## BTHT6 Part list

Part No	Name	Qty
S01-058	BLOWER	1
S16-388	TERMINAL BLOCK	3
S16-471	POWER SUPPLY BUTTON	1
S16-472	LAMP BOTTOM	1
S16-470	THERMOSTAT	1
S16-465	LAMP	2
S16-012	LAMP	1
S16-466	STARTER	3
S16-467	LAMP HOLDER	3
S16-480	LAMP CLIP	6
S16-468	BALLAST	3
F90-869	GLASS PANEL,REAR	1
S21-077	SIDE GLASS	2
S21-080	GLASS PANEL,FRONT	1
S25-052	WIRE SHELF	8
S16-514	HEATER	1
S99-183	DOOR HINGE	2
S19-004	MAGNETIC	1
S19-148	CASTOR C/W BREAK	2
S19-149	CASTOR	2
A50019	SIDE PLATE	2
A53020	FRONT SHUTTER	1
S16-566	BLOWER	1
S16-479	SENSOR	1