



D40F REFRIGERATED

DIMENSION SERIES



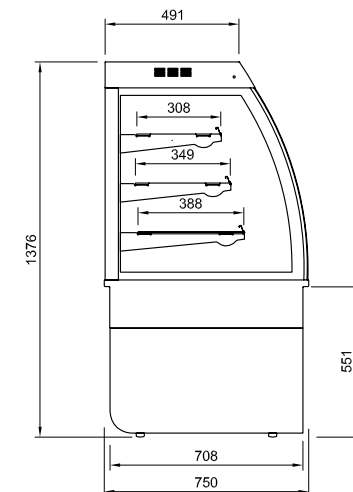


- Open front with stainless steel hinged rear doors
- Deck forced refrigeration
- Double glazed glass ends
- Three adjustable shelves
- Ticket strips on shelves and base
- Canopy light
- Integral condenser
- Plinth, castors and skirt
- Available in two lengths

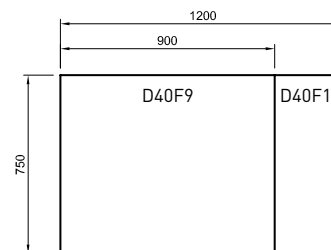

D40F OPEN FRONTED - REFRIGERATED

SERVICES REQUIREMENTS DIMENSION SERIES

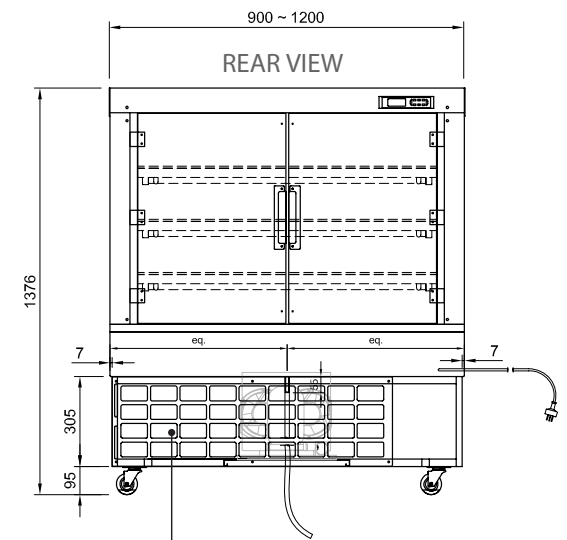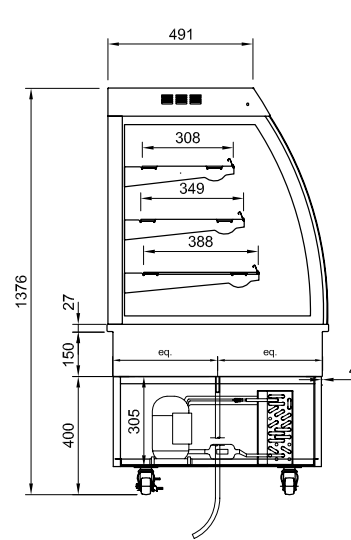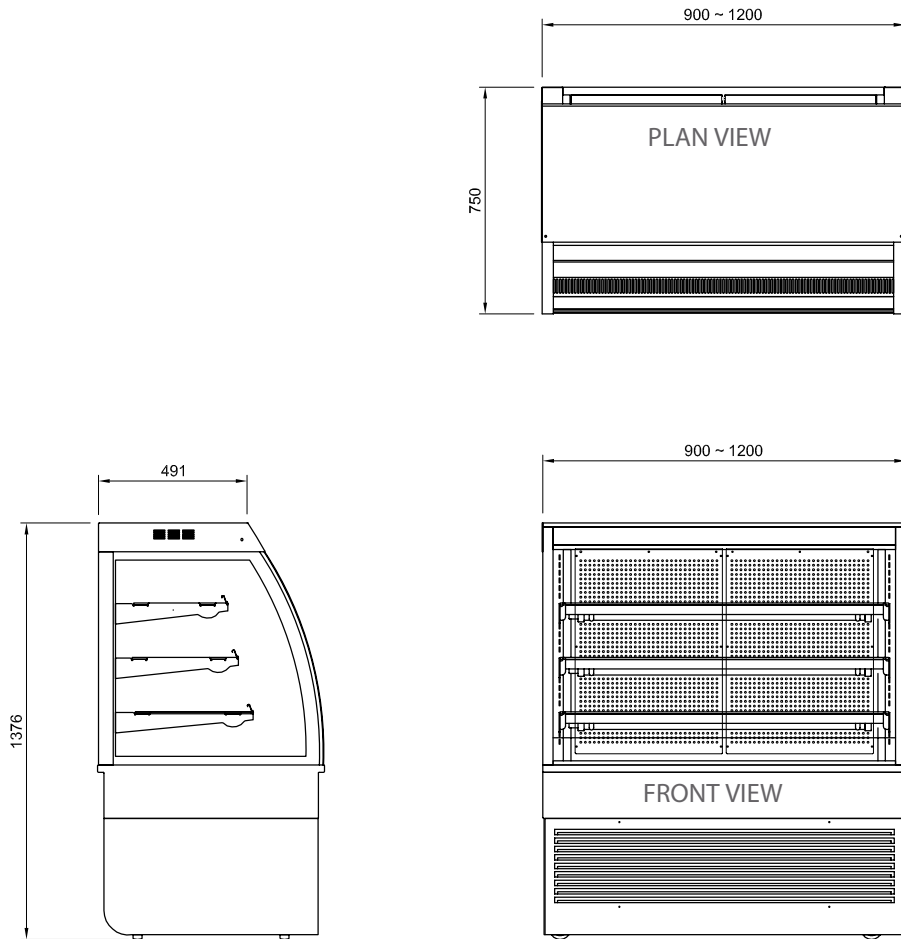

CONDENSATE DRAINAGE

- Drain pipe position as shown
- 55 mm Stainless steel spigot to plastic flexible waste pipe 15mm dia. 1000 mm length
- See drainage specifications.
- Maximum ambient operating conditions
25 °C / 60% Relative Humidity

Removable rear Zintec cover. Drain pipe area left open.

ELECTRICAL POWER

- Electrical power cord 1500mm
- All units 3 pin 10 amp 1 phase - plug can be removed and unit hard wired on site


Clean condenser face at two weekly intervals

Stand Alone Refrigerated Unit With Covers


DIMENSION D4 0F - Chilled Unit Services

D40F/C40F OPEN FRONTED - REFRIGERATED


UNIT PLACEMENT CONSIDERATIONS

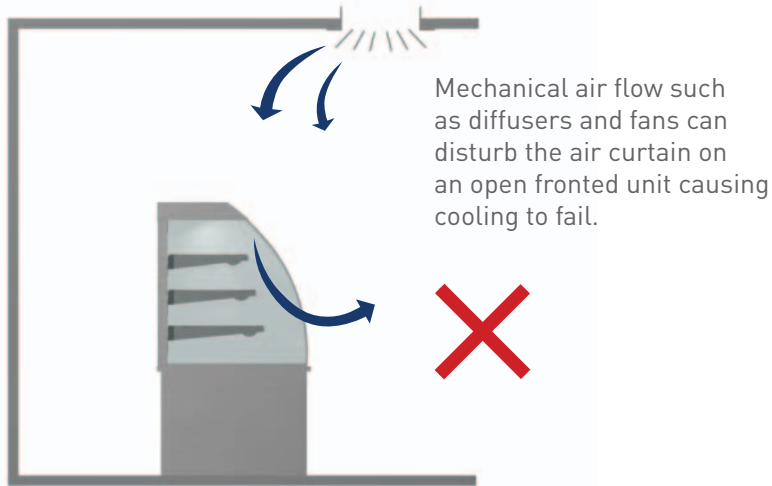

Avoid Disruptive Air Flow Sources

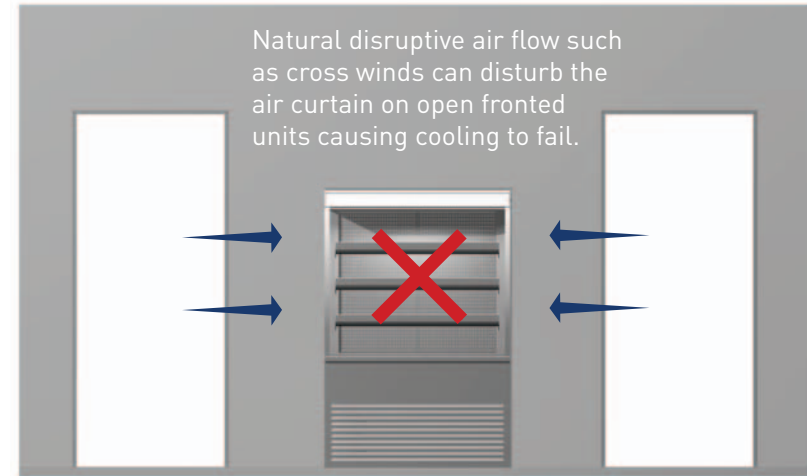

Avoid Disruptive Air Flow Sources

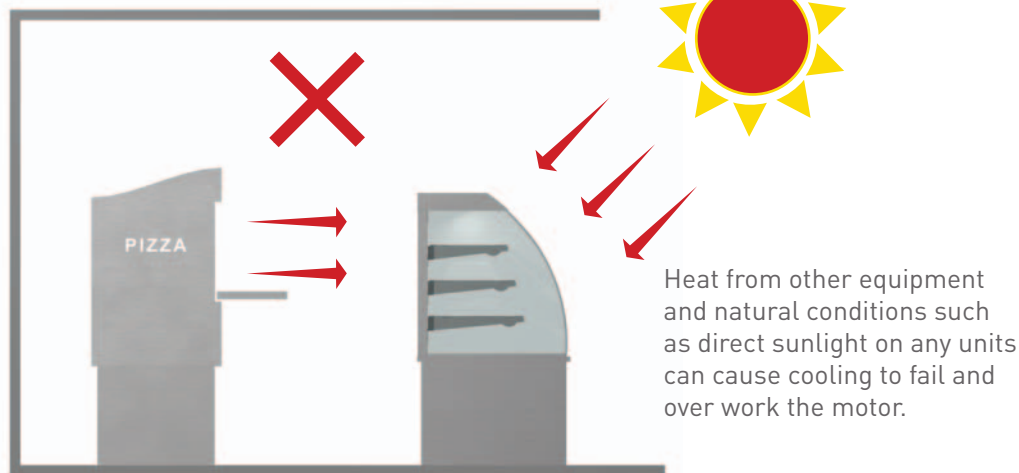

Avoid Radiant and Convective Heat Sources

Be aware of potential problems by placing units in adverse ambient conditions. Locations to be avoided are:

- Close to shop front exterior.
- In an outside location.
- In direct sunlight.
- In a high cross wind area.
- Near any source producing excessive heat.

Increase service intervals for units in dusty or polluted areas.

D4 INSTALLATION OPTIONS FOR NIB WALL

D4 SERIES

50mm gap



Free standing unit
Positioned behind nib wall. Counters or additional cabinets are typically positioned each side.

A 50mm gap is recommended between hot and cold adjoining units.

Always remove Stainless Steel plinth covers before butting up to nib wall.


Floating front panel option

Unit pushed into low bench unit.



Vent to line up with Condenser unit


Front ducted vent option

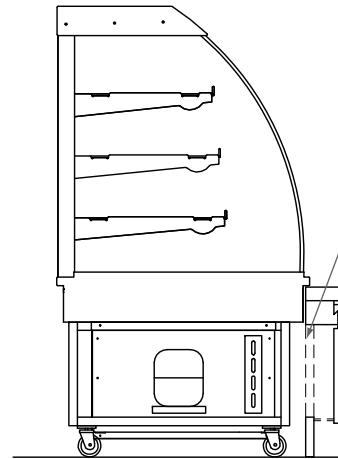

Remove front grill plinth cover from front of unit to offer better air flow into condenser face.

Removable front panel

Section - Unit with floating front panel

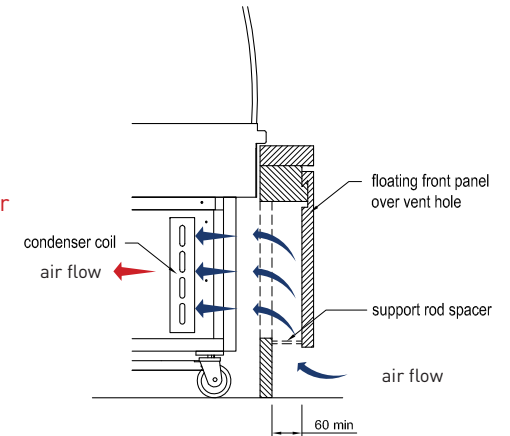


Enlarged Section - Unit with floating front panel

CLEANING ALLOWANCE ALL SITUATIONS


If unit is to be placed in a situation where it cannot be easily moved consideration must be give for regular cleaning of the condensor vanes. ie removable front vent or panel

Remove front grill plinth cover from front of unit to offer better air flow into condenser face.

Removable vented grill to front.

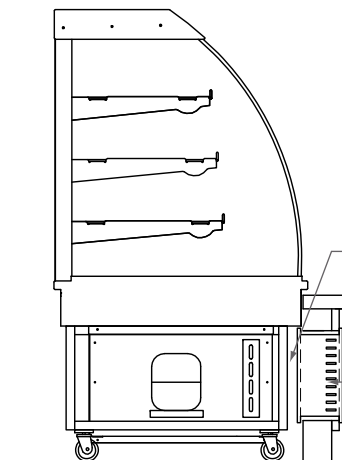


Section - Unit with vent

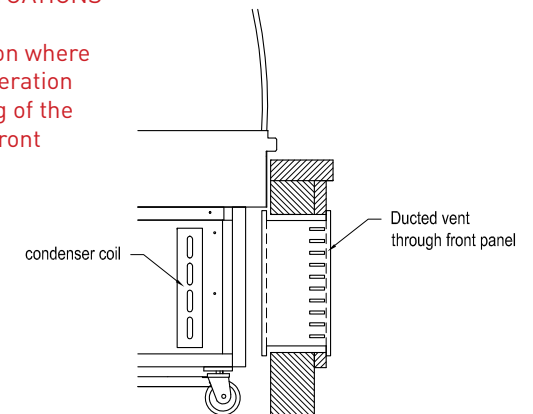

Enlarged Section - Unit with vent


COSSIGA AIR FLOW USAGE GIUDE

USAGE GUIDE LINES

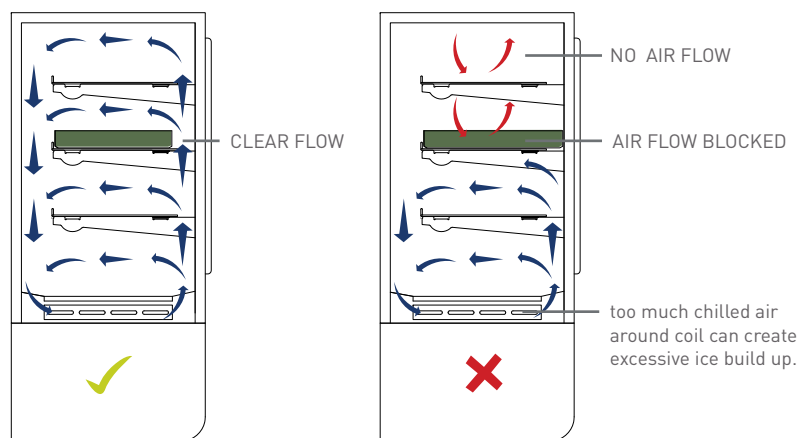

CORRECT AIRFLOW.

INCORRECT AIRFLOW.

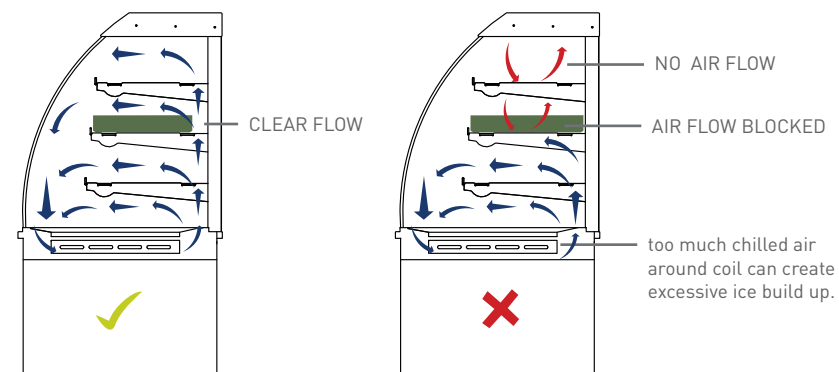

CORRECT AIRFLOW.

INCORRECT AIRFLOW.

Internal Air Flow Requirements

CORRECT AIRFLOW ✓
for both hot and cold units.


Vents are not blocked at base and ensure trays or plates are not blocking airflow at the rear of the unit.

INCORRECT AIRFLOW ✗
for both hot and cold units.

Blocked airflow disturbs correct air movement and creates uneven temperatures inside unit.

Ensure bottom vents are not blocked by plates or product.

Blocked air flow will retard operation on both HOT and COLD unit.

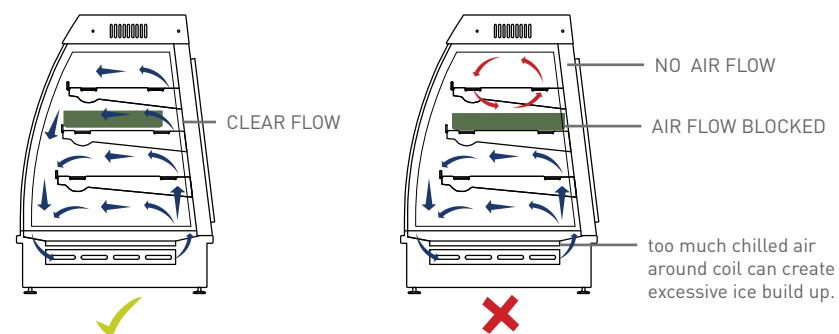

CORRECT AIRFLOW.

INCORRECT AIRFLOW.