



GTRF REFRIGERATED

TOWER SERIES

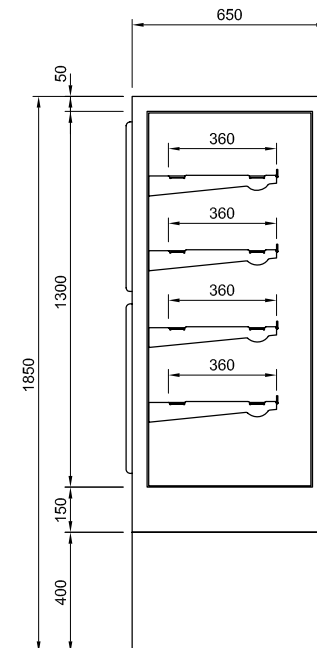


Solid glass front and sliding rear doors
 Deck forced refrigeration
 Double glazed glass
 Four adjustable shelves
 Ticket strips on shelves and deck
 Vertical and canopy lights
 Integral condenser
 Plinth, castors and skirt
 Available in two lengths
 Free standing ticket strip for base
 Condensate waste container supplied

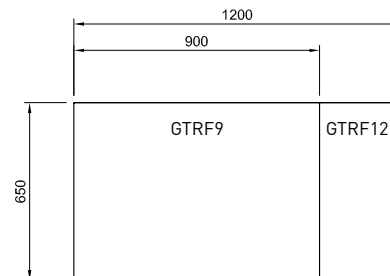


GTRF REFRIGERATED

TOWER SERIES

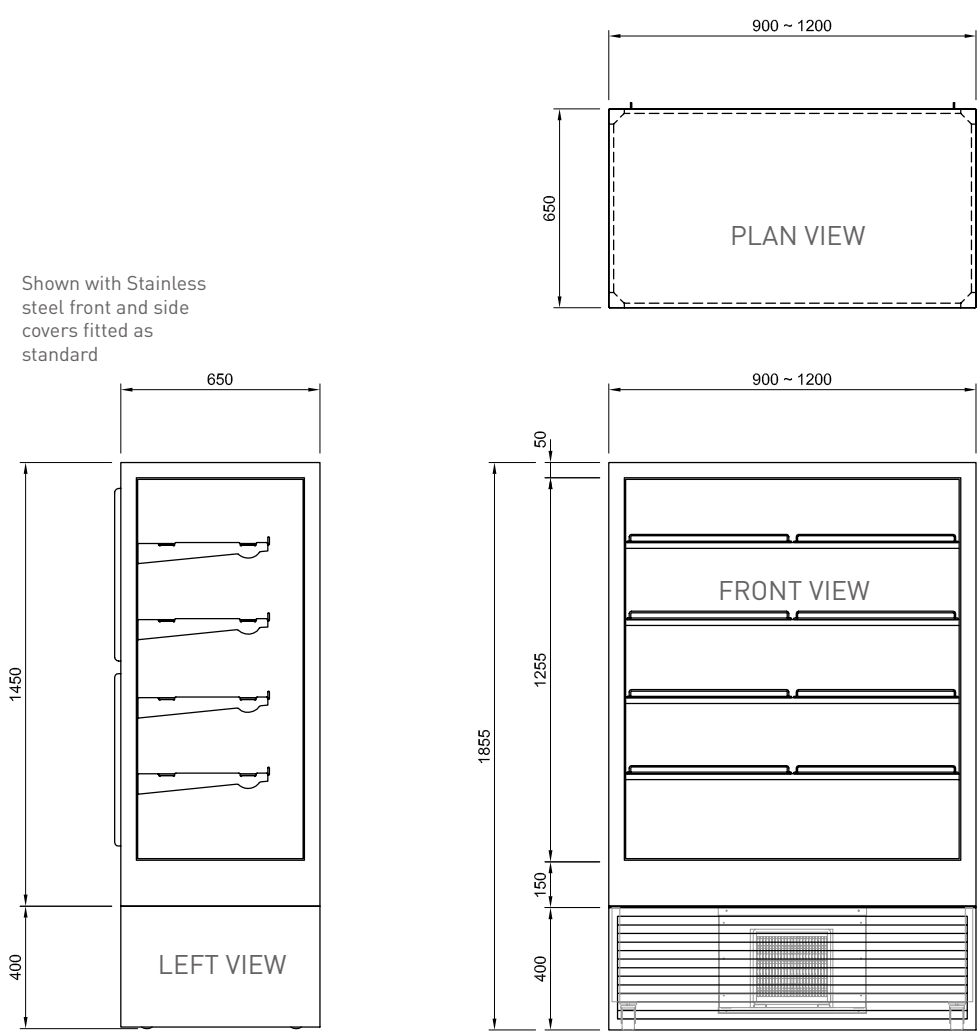


Stand Alone Refrigerated Unit With Covers

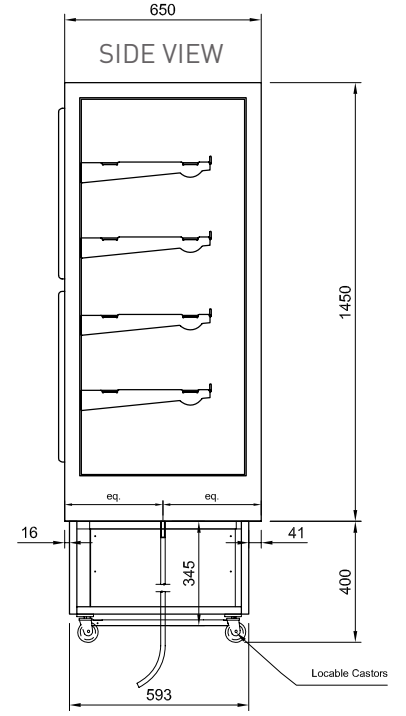

CONDENSATE DRAINAGE

- Drain pipe position as shown
- 55 mm Stainless steel spigot to plastic flexible waste pipe 15mm dia. 1000 mm length
- Maximum ambient operating conditions
25°C / 60% Relative Humidity

Stand Alone Sub Frame Only

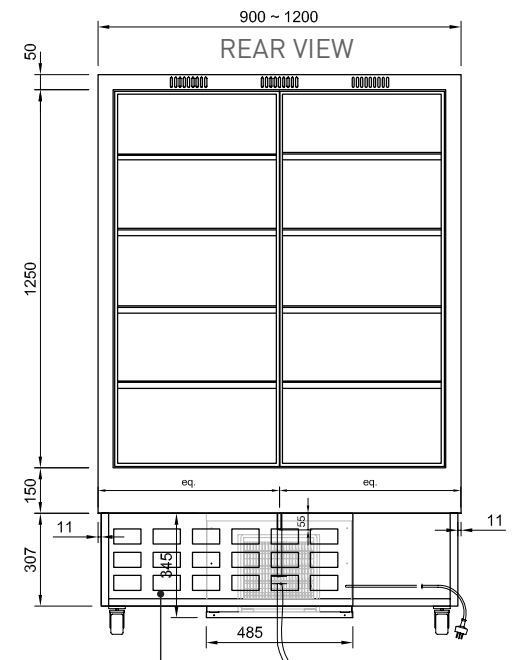

Removable rear Zintec cover.
Drain pipe area left open.

ELECTRICAL POWER


Electrical power cord 1500mm
All units 3 pin 10 amp 1 phase
- plug can be removed and unit hard wired on site

Clean condenser face at two weekly intervals




GTRF BTRF D4RF

REFRIGERATED UNITS DRAINAGE SERVICES OPTIONS

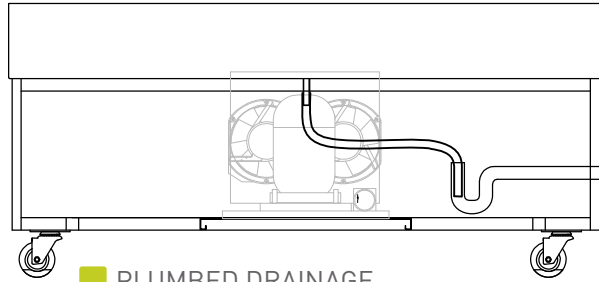


■ PLUMBED DRAINAGE

- Drainage to building waste
- Building waste by client

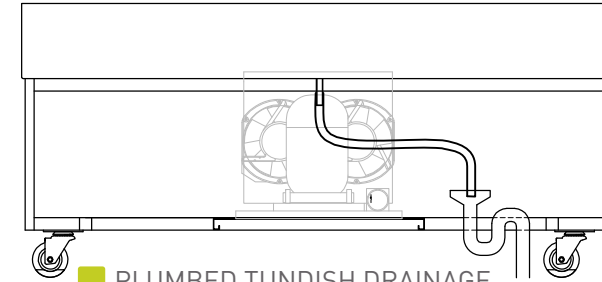


■ PLUMBED TUNDISH DRAINAGE

- Maximum 150 mm above finished floor level
- Drainage to building waste
- Building waste by client

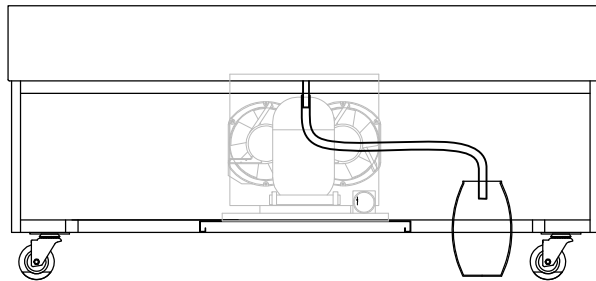

■ FREE STANDING RECIPIENT

- Supplied with all chilled units in range
- Receptacle placed under unit to receive condensate waste
- Dispose of waste water daily

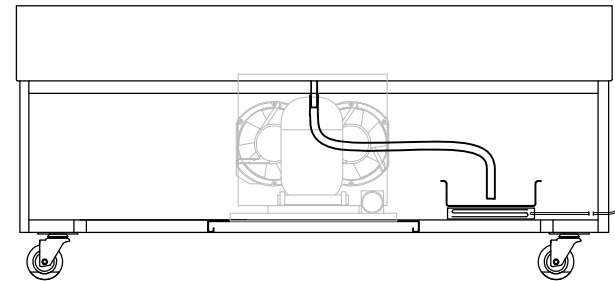

■ ELECTRICAL EVAPORATOR PAN

- Proprietary electrical unit to evaporate condensate waste (not supplied by cossiga)
- Will require power source


■ Drainage Options

COSSIGA

For further information, contact us on **T** +649 580 8471 **F** +649 580 2514 **E** info@cossiga.com
To download C.A.D. blocks please visit www.cossiga.com


COSSIGA AIR FLOW USAGE GIUDE

USAGE GUIDE LINES

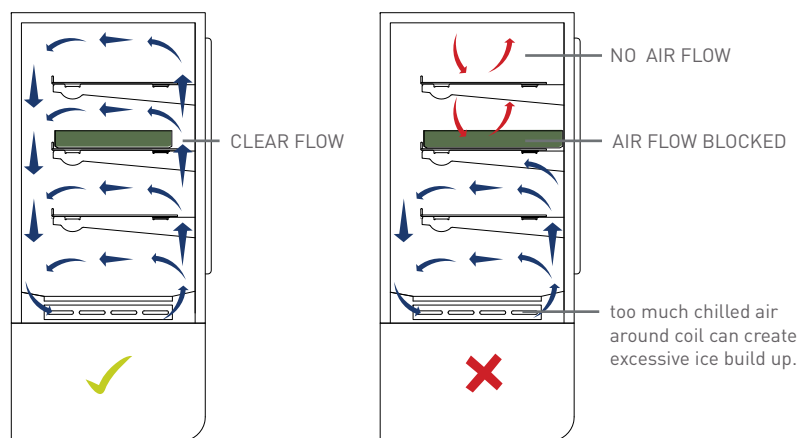

CORRECT AIRFLOW.

INCORRECT AIRFLOW.

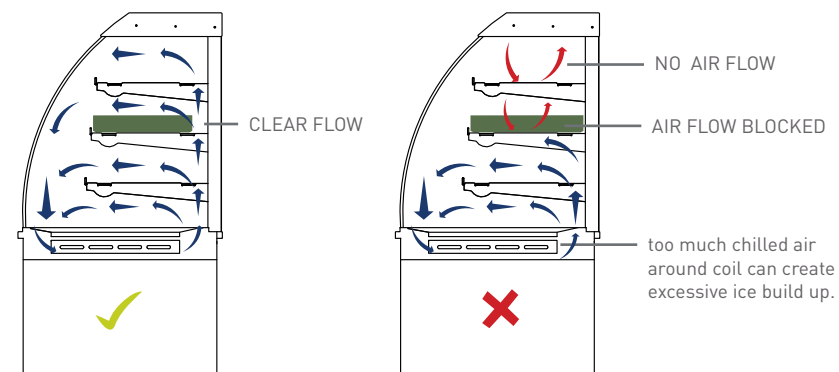

CORRECT AIRFLOW.

INCORRECT AIRFLOW.

Internal Air Flow Requirements

CORRECT AIRFLOW ✓
for both hot and cold units.


Vents are not blocked at base and ensure trays or plates are not blocking airflow at the rear of the unit.

INCORRECT AIRFLOW ✗
for both hot and cold units.

Blocked airflow disturbs correct air movement and creates uneven temperatures inside unit.

Ensure bottom vents are not blocked by plates or product.

Blocked air flow will retard operation on both HOT and COLD unit.

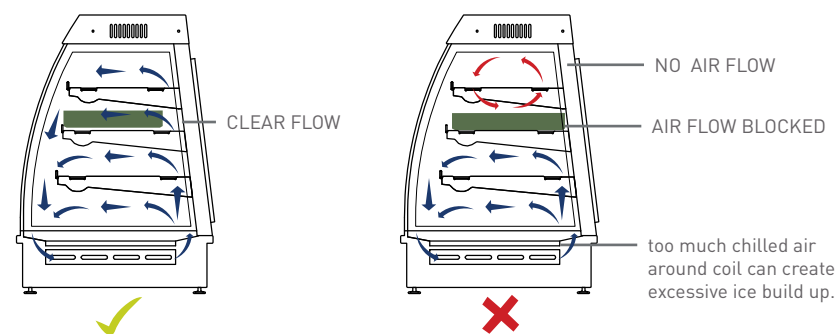

CORRECT AIRFLOW.

INCORRECT AIRFLOW.